
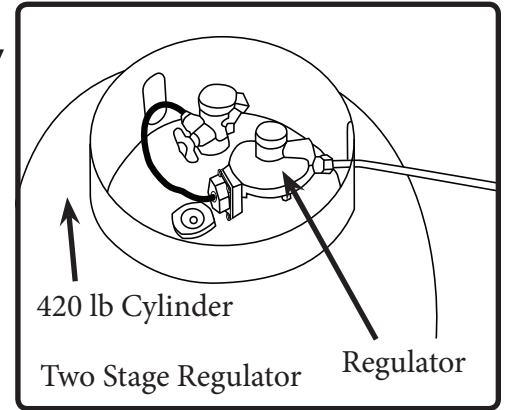


# 200 lb & 420 lb Vertical Propane Cylinders (A.S.M.E. Cylinders)

All cylinders must be set on solid concrete slabs!!


Before positioning slabs, place landscape fabric or similar product to prevent weeds growing against the cylinder.

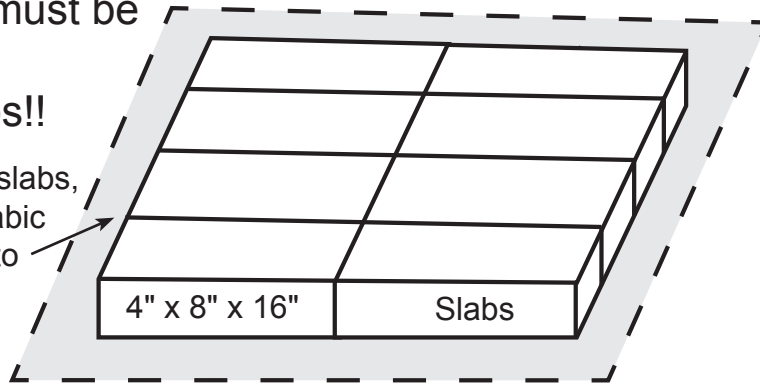

**Location of A.S.M.E. Cylinders  
From NFPA 58, Appendix G**

**Federal, state, and local ordinances and regulations should be observed at all times.**

Typical A.S.M.E. Cylinder Filled From Bulk Truck 200lb & 420lb

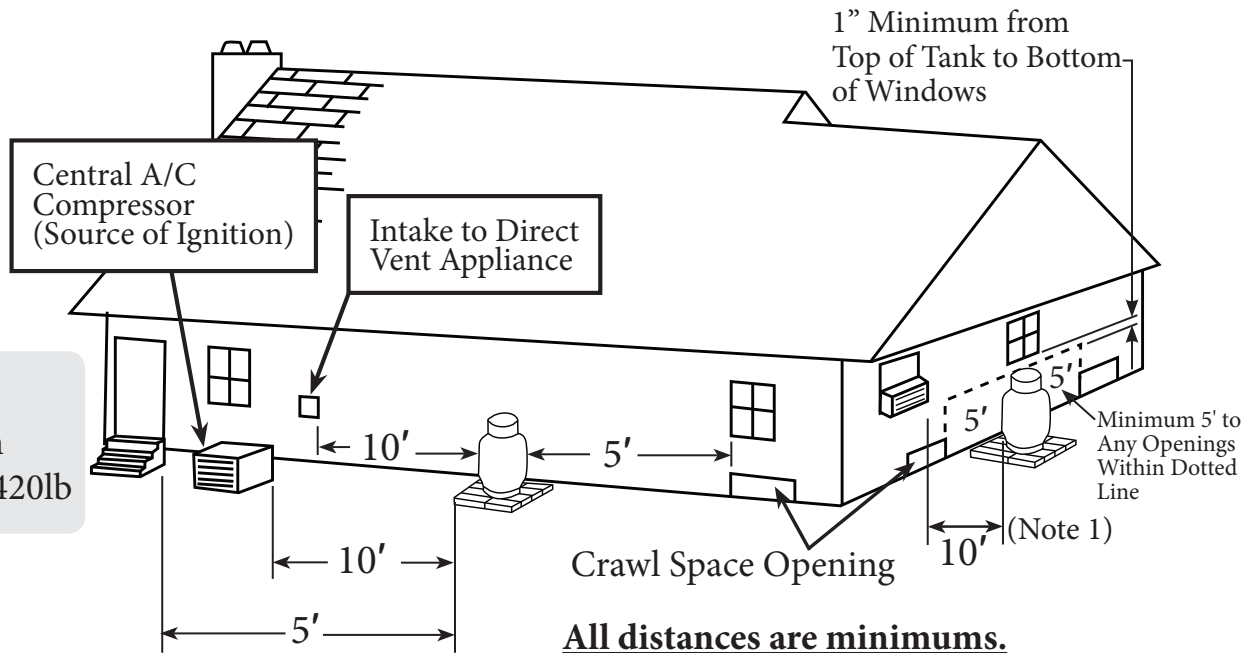

- Notes:**
- 1) If A.S.M.E. cylinder is filled on-site from a bulk truck, the filling connection and vent valve must be at least 10 feet from any external source of ignition, direct vent, or mechanical ventilation system.

These instructions are intended only for a basic installation guide. Always refer to federal, state, and local ordinances and regulations or NFPA 58. 11-15

Cylinder.....	\$ _____	A.S.M.E No Test Needed - Purged
Slabs.....	\$ _____	
Pigtail.....	\$ _____	
Two-Stage Regulator.....	\$ _____	
Total	\$ _____	



Phone: 717.354.5691  
676 N. Shirk Road — New Holland, PA 17557  
Hours: Mon. thru Fri. 7a.m. - 5p.m. Sat. 7-11:30 a.m.