
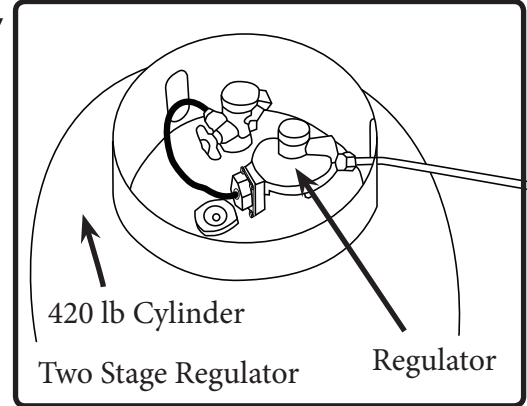


200 lb & 420 lb Vertical Propane Cylinders (D.O.T. Cylinders)

All cylinders must be set on solid concrete slabs!!


Before positioning slabs, place landscape fabric or similar product to prevent weeds growing against the cylinder.

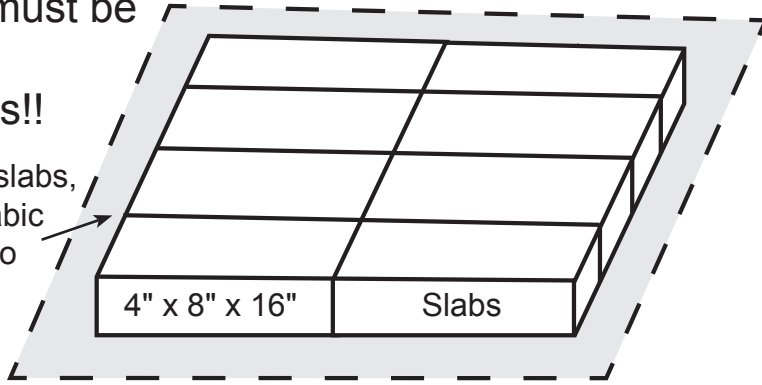

**Location of DOT Cylinders
From NFPA 58, Appendix G**

Federal, state, and local ordinances and regulations should be observed at all times.

Typical Replacable DOT Cylinders
60lb or 100lb
(Not Filled on Site)

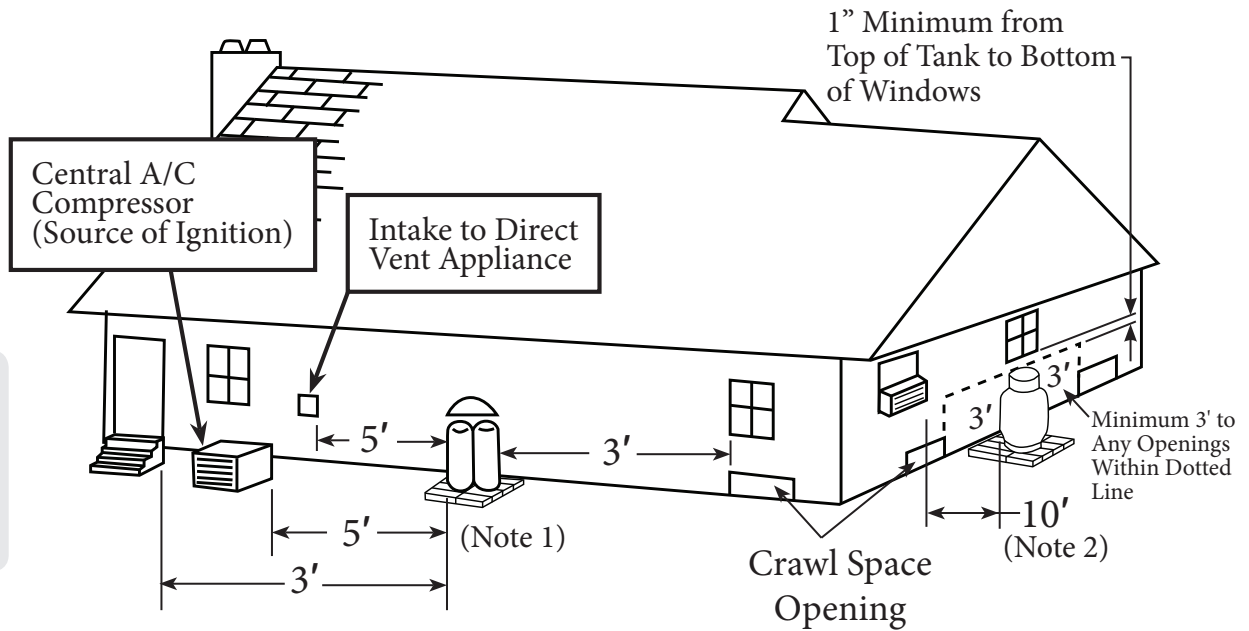

Notes:

- 1) 5 foot minimum between relief valve discharge and external source of ignition (air conditioner), direct vent or mechanical ventilation system such as attic fan. (Cylinders not filled on site.)
- 2) If DOT cylinder is filled on-site from a bulk truck, the filling connection and vent valve must be at least 10 feet from any external source of ignition, direct vent, or mechanical ventilation system.

All distances are minimums.

These instructions are intended only for a basic installation guide. Always refer to federal, state, and local ordinances and regulations or NFPA 58. 11-15

Cylinder.....	\$ _____	DOT 12 Year Test – Purged
Slabs.....	\$ _____	
Pigtail.....	\$ _____	
Two-Stage Regulator....	\$ _____	
Total	\$ _____	



Phone: 717.354.5691
676 N. Shirk Road – New Holland, PA 17557
Hours: Mon. thru Fri. 7a.m. - 5p.m. Sat. 7-11:30 a.m.